

# Using the Ampersand symbol (&) to Serialize

On the Set Editor screen, type in your text. The location of where you want your serialization to start is where you will place the “&” symbol:

The screenshot shows the 'Set Editor' interface. On the left, a blue vertical bar contains the ID '1'. The main area is divided into 'Front Side' and 'Information' sections. The 'Front Side' section contains two lines of text: 'CC27-020A' and 'S/N: ARTA-'. A red arrow points to the end of the second line, indicating where to place the ampersand symbol.

The screenshot shows the 'Set Editor' interface after the ampersand symbol has been entered. The text in the 'Front Side' section now reads 'CC27-020A' and 'S/N: ARTA-&'. A red box highlights the ampersand symbol, indicating its position at the end of the second line.

After entering the “&” symbol, press Enter. The serialization window will appear. Enter the parameters desired and click OK.

SumiLabel - Serialisation

Serialisation

Set up counters for serialisation

**S/N: ARTA-&**

From: 87997 End: 100000 Step: 1

OK Cancel

If you want to have all the markers appear on the Set Editor screen, select Yes. Selecting No will only keep the 1<sup>st</sup> marker on screen.

Print Settings

Confirm

Populate series with 12004 entries?

Yes No


Markers:

ID	Label
1	CC27-020A S/N: ARTA-&

Length: 1.17

To view the string after selecting No, go to the Quick Print Preview option.

From there you can see each sequential marker. To view the next set, click on Next or Last

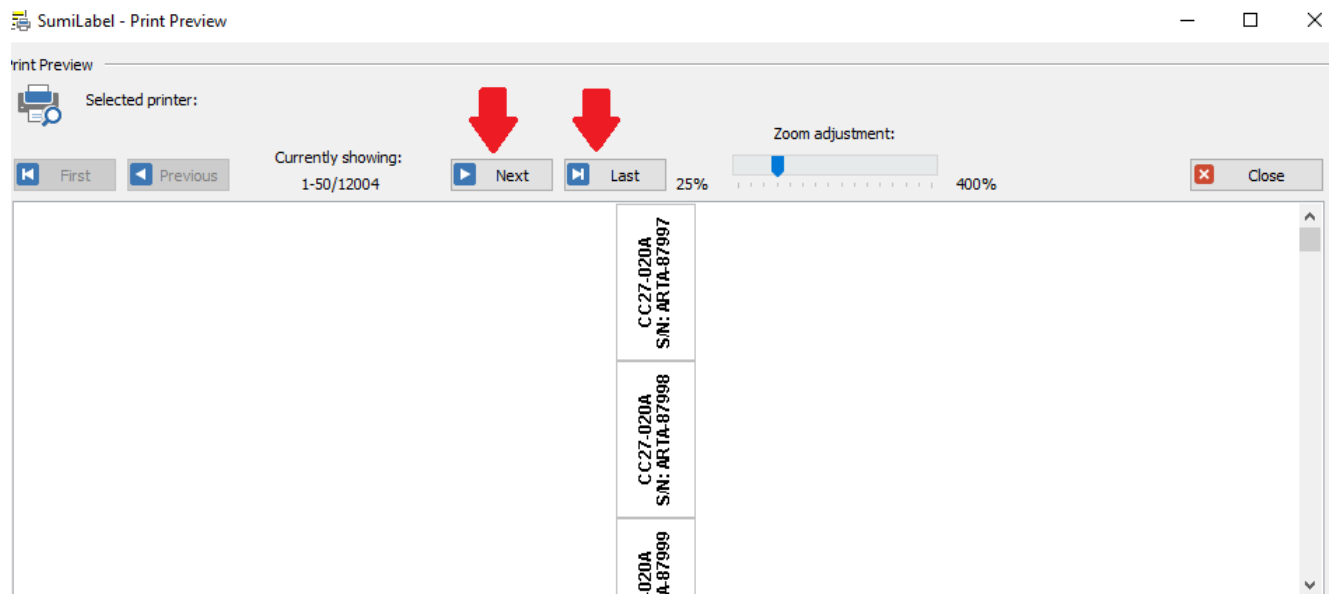

Your markers are now ready to print with serialization embedded into them.



915 Armorlite Drive  
San Marcos, CA 92069-1440

[identification@seipusa.com](mailto:identification@seipusa.com)  
(760)761-0600

[www.SumiSupport.com](http://www.SumiSupport.com)