

the global cable identification system

Changing the Platen

Instructions for changing the platen on the Sumitag SS-SX printer.

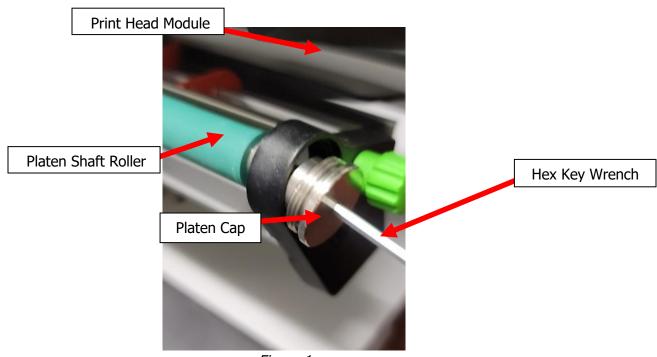


Figure 1

To change out the **Platen Shaft Roller**:

- 1. Power the printer off
- 2. Turn the green **Print Head Latch** to the right to unlatch and open the **Print Head Module**.
- 3. Locate the **Platen Shaft Roller** which is directly below the **Print Head Module** (see Figure 1)
- 4. With the included hex key wrench, loosen then remove the **Platen Cap** (Figure 1). This will release the platen from its mounting position.
- 5. Pull the platen out of the printer. Replace the used platen with the new one. Insert the end of the new platen into the extended mounting shaft (Figure 1b).
- 6. To reinstall the **Platen Cap**, follow the removal instructions in reverse.



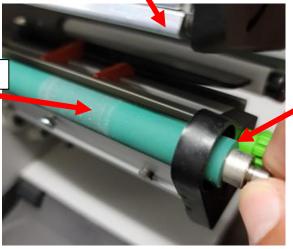


Figure 1a

Figure 1b



Please visit our support site at www.SumiSupport.com for more information regarding the SumiMark and Sumitag printers.



Platen Shaft Roller

SUMITOMO ELECTRIC INTERCONNECT PRODUCTS, INC.

915 Armorlite Drive San Marcos, CA 92069-1440 Identification@seipusa.com (760)761-0600

www.SumiSupport.com

Rev A-March 2025

Pull Platen out from printer