





Changing the Platen

Instructions for changing the upper platen on the Sumitag DS-QT printer.

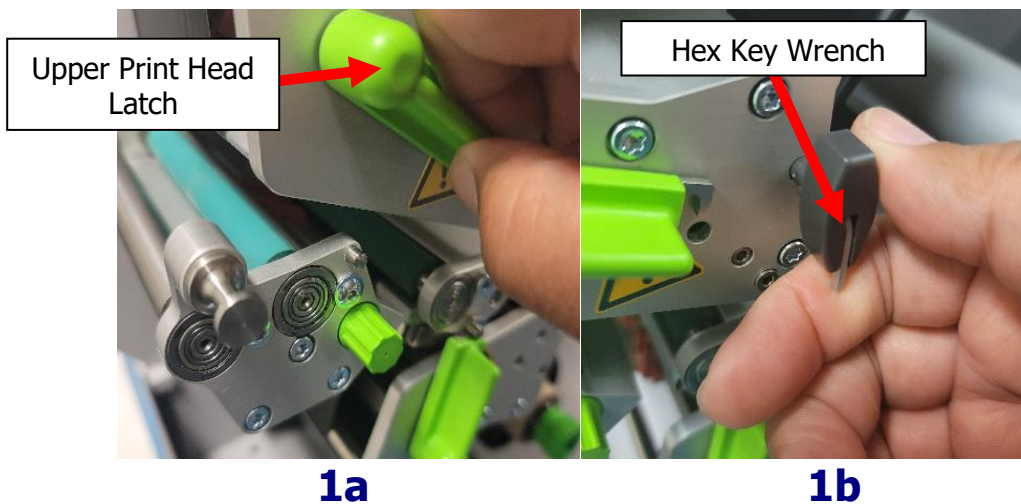


To change out the **Upper Platen Shaft Roller**:

1. Power the printer off
2. Turn the green **Print Head Latch (1a)** to the right to unlatch and open the **Upper Print Head Module**.
3. Remove the included **Hex Key Wrench (1b)**.
4. Locate the **Upper Platen Shaft Roller** and using the hex key wrench remove the **Mounting Screw** located to the right at the end of the platen (**1c**).

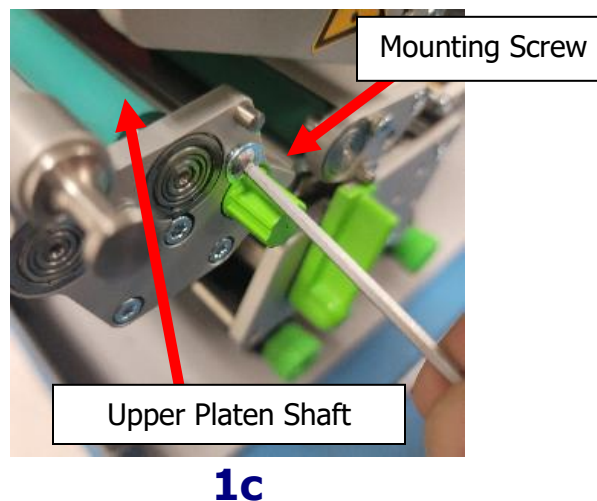

5. Reaching in where the platen is, push the shaft towards the outside of the mounting area **(1d)**. The outer bearing will release and the shaft will now be removable.

Push Platen in this direction to
remove from mount

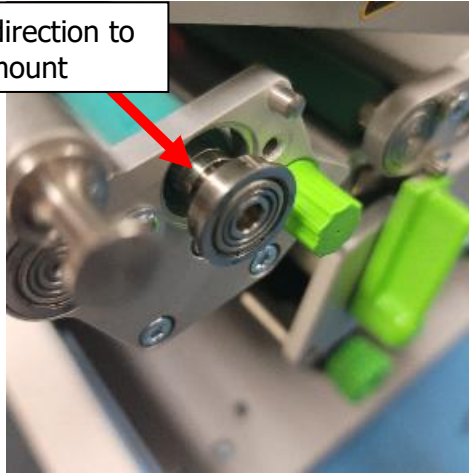

1d

6. Pull the platen out of the printer. Replace the used platen with the new one. To reinstall the **Platen** follow the removal instructions in reverse.

Please visit our support site at www.SumiSupport.com for more information regarding the Sumimark and Sumitag printers.



SUMITOMO ELECTRIC INTERCONNECT PRODUCTS, INC.

915 Armorlite Drive
San Marcos, CA 92069-1440

Identification@seipusa.com
(760)761-0600

www.SumiSupport.com

September 2026