



How to Turn Cutter On/Off in Sumilabel

If you want to enable or disable the cutter for a particular job, it can be done from within Sumilabel on a per-job or global basis.

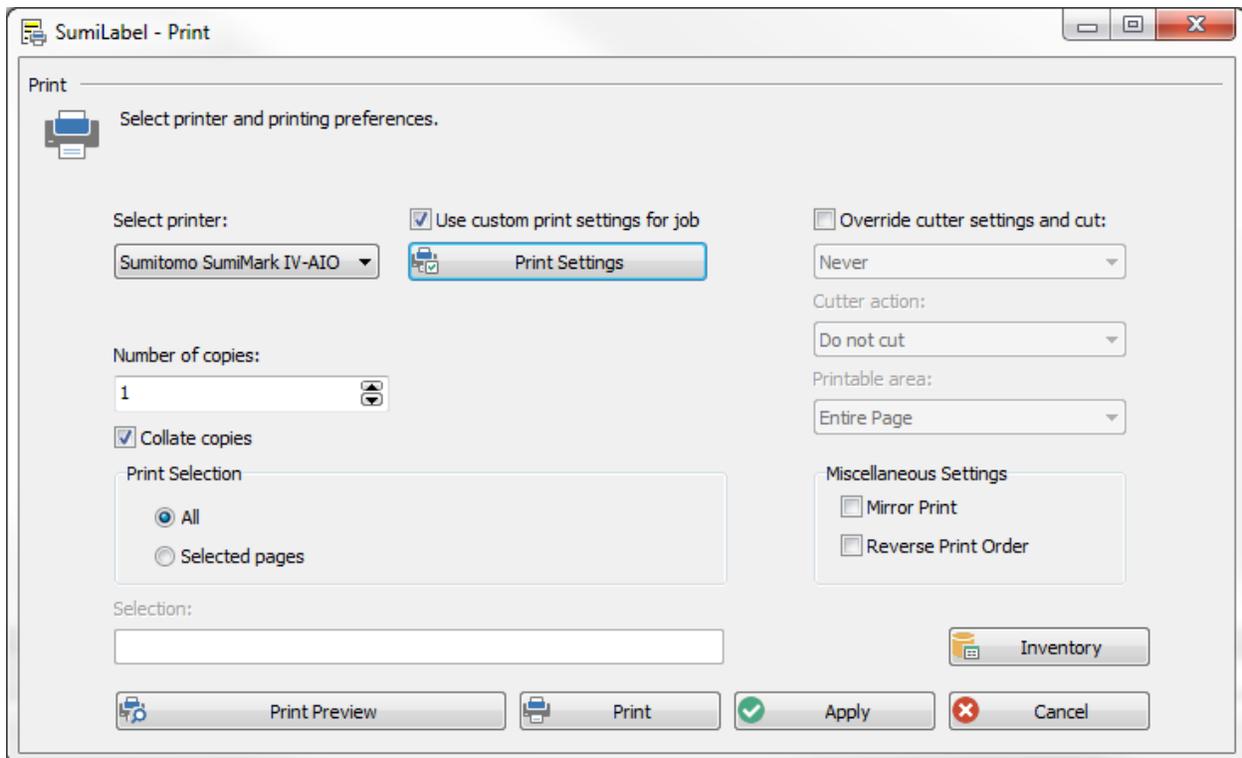

For PER JOB cutting/not cutting:

- Open the Set in question, open the Print dialog, then check "Use custom print settings for job" and click Print Settings.
- Check or Uncheck "Enable cutter" depending on desired effect. Once you've made the change, click OK, then click Apply.
- Choose Yes when prompted with "Print settings have changes. Save print settings to job?"

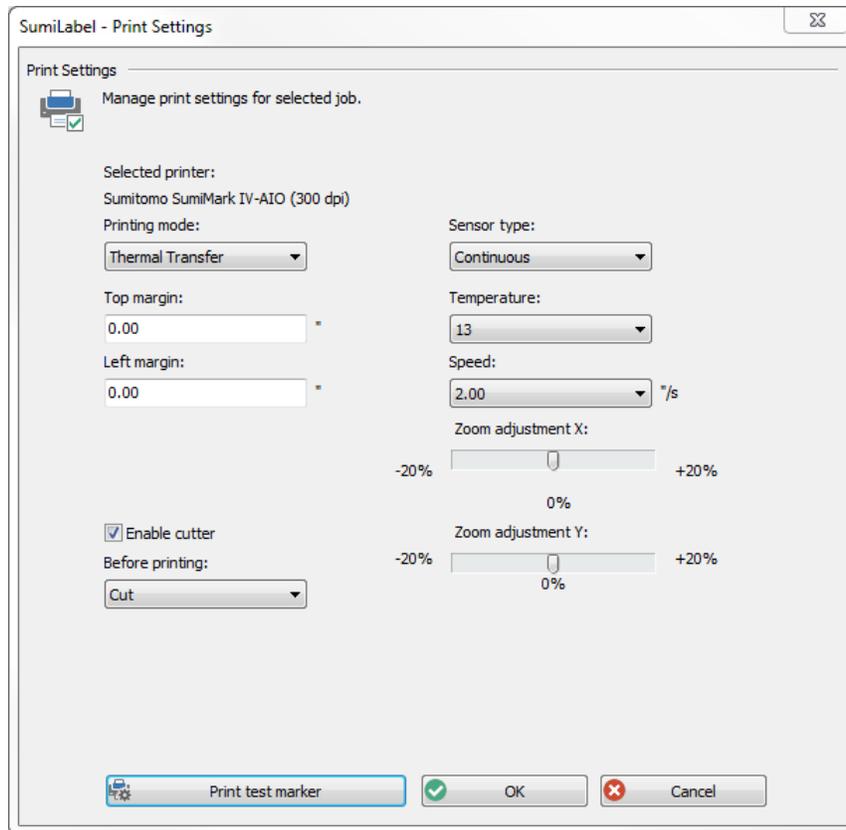

For GLOBAL/PERMANENT cutting/not cutting:

- From the main window of SumiLabel (*SumiLabel - Explorer*) navigate to Options->Printer Options.
- Verify that the printer in question appears down in the "Application printers:" subwindow, then select it and click on Default Print Settings.
- Check or Uncheck "Enable cutter" depending on desired effect. Once you've made the change, click OK.

If you have any questions please contact Identification Technical Support:

- Phone : +1 (760) 761-0600 select option #2
- E-mail : Identification@seipusa.com

