



Cutter Reset Procedure

SumiMark IV Marking Systems

Overview:

This document provides step-by-step directions on how to reset the Cutter on the SumiMark IV Marking System. The Cutter Reset Button is a small, black push button which actuates and repositions the cutter to the home position. In rare cases, the cutter may need to be reset because it is out of range with the sensor.

Application:

To reset the Cutter, follow these steps:

1. Power the printer off. See visual reference on page 2.
2. Locate reset button on right side of Ribbon Payoff Spindle. See visual reference on page 3.
3. Hold the Cutter Reset Button down.
4. Power Off printer while holding down button.
5. Power printer back On. Printer should cycle one cut to reset itself
6. Release button.

*If cutter continuously cycles when powered back up, release the button when the blade is at its lowest point (not visible through the opening). This may take a few try's to properly reset the cutter.

Note: do not attempt to adjust the cutter sensor unless requested by a SumiMark technician.

Visual references on following pages



SUMIMARK®

Visual References:

View of back panel of printer.

 


Additional visual reference on next page

SUMIMARK®

Visual References Continued:

Side view of printer with flip cover open.

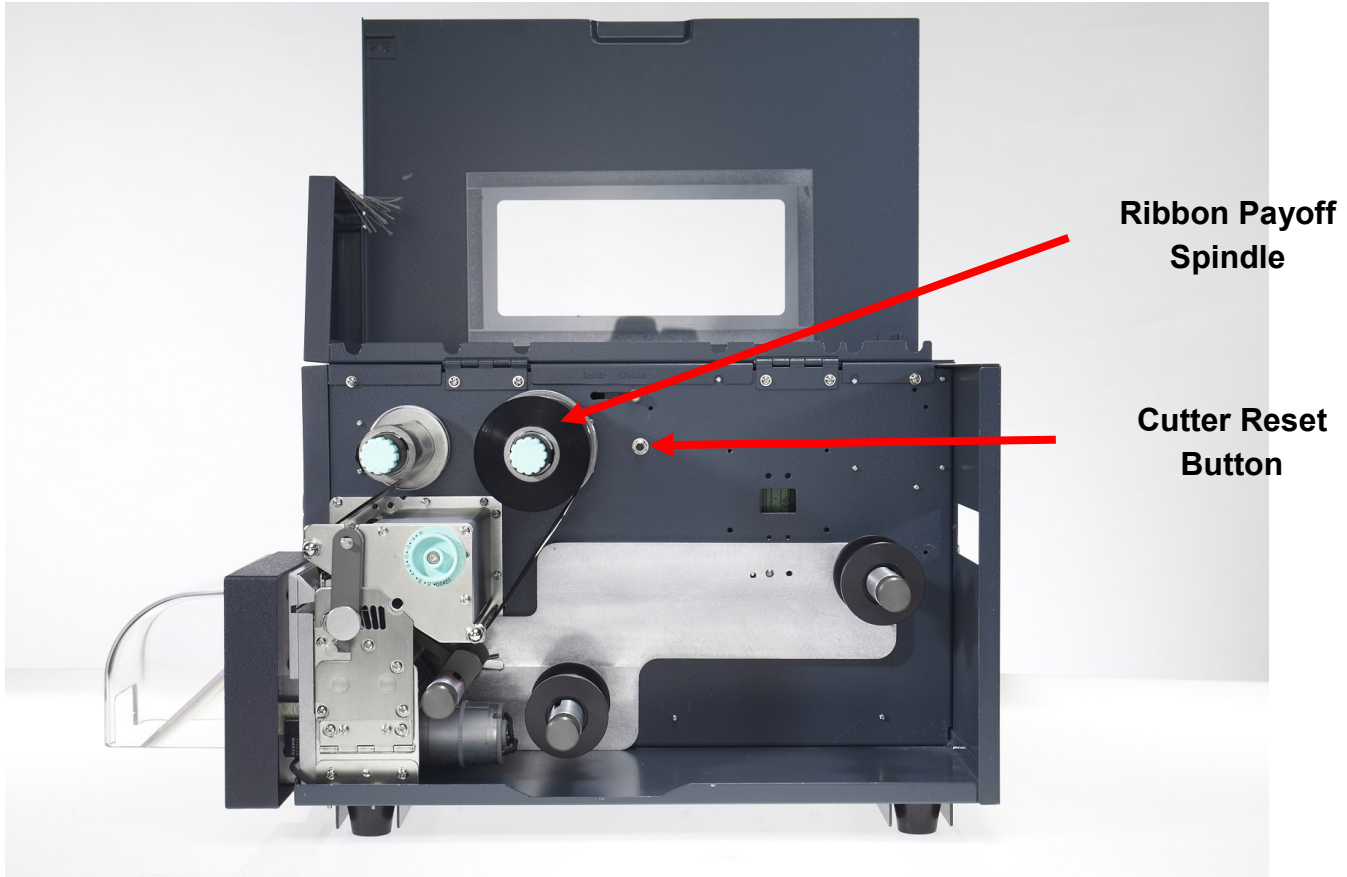

 **SUMITOMO ELECTRIC INTERCONNECT PRODUCTS, INC.**

915 Armorlite Drive
San Marcos, CA 92069-1440

T: 800.758.3515
F: 800.758.3517
E: customerservice@seipusa.com
W: www.seipusa.com

©2014 Sumitomo Electric Interconnect Products, Inc. All rights reserved. The Sumitomo Electric logo is a registered trademark of Sumitomo Electric Industries. Other products and brand names may be trademarks of their respective owners. The information on this datasheet is believed to be correct at the time of publishing. Specifications given in this publication are subject to change without notice.